Installation Notes
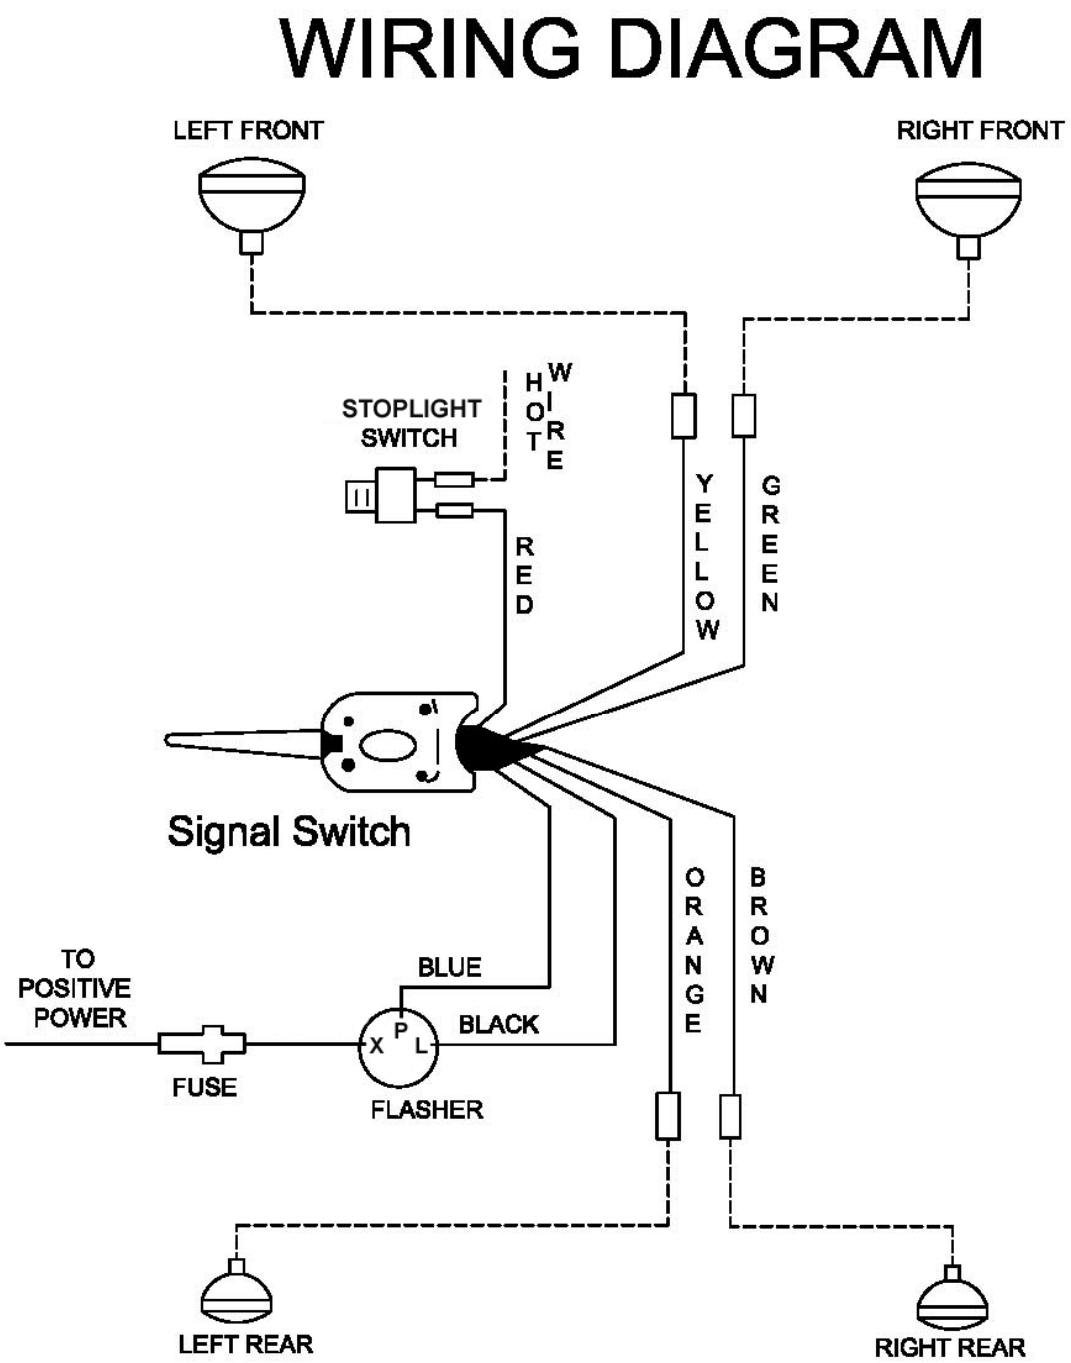
- Use a standard 14 amp – three prong flasher (552). Using the newer ones with the bulb out indicator will cause lights on switch to illuminate continuously.
- Grounding is through the column. Mounting strap must contact bare metal on the column to insure proper operation.
- The wiring diagram is for vehicles with existing wiring for stop lights.